






Assembly instructions for Front Artillery Position


In addition to the MDF sprue you need:

- A hobby knife
- A file
- Woodglue


After pushing out the MDF parts we advise you to remove the remains of the connection points with a file or hobby knife and smooth it out.

If not stated otherwise, glue the parts together when the instructions tell you to insert or assemble parts. Use the pictures shown with the instruction as a guide for the assembling.

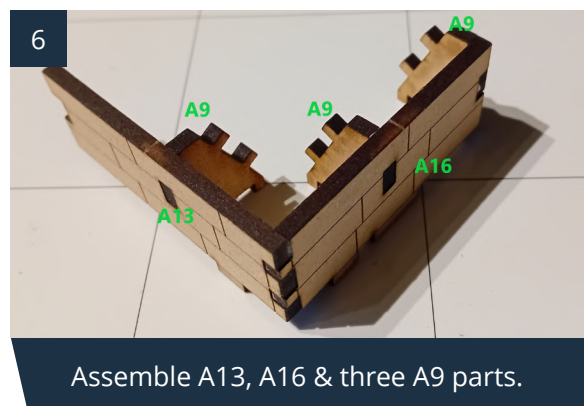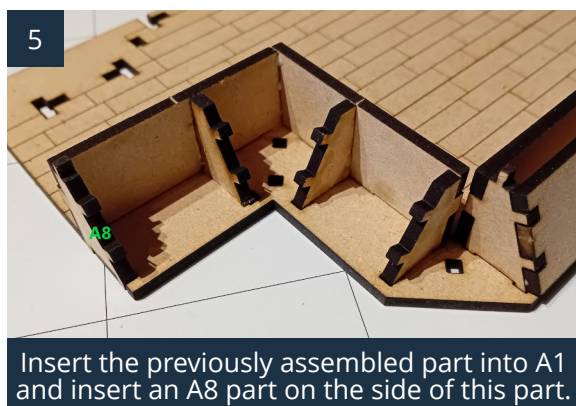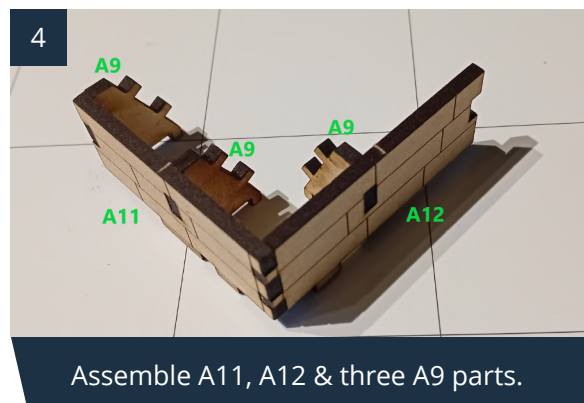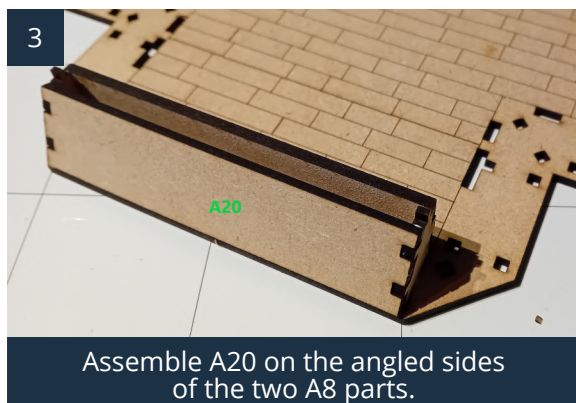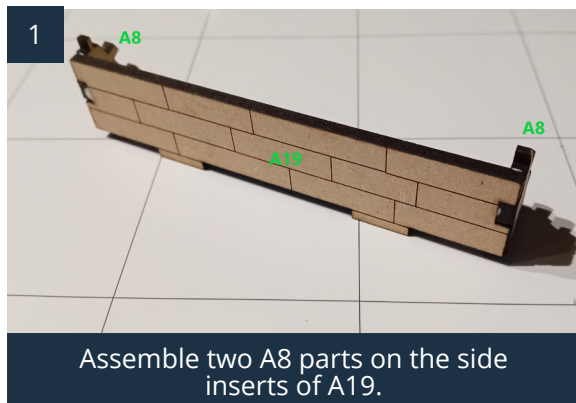


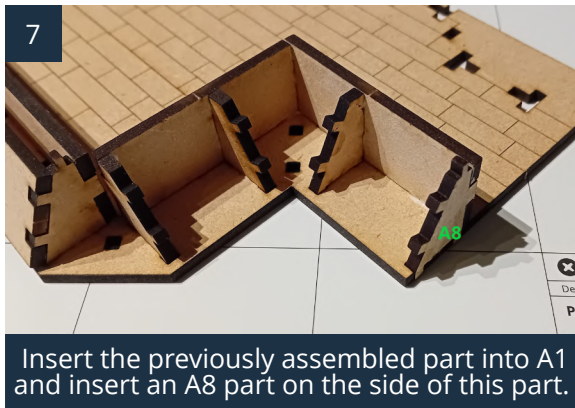


Insert the previously assembled part into A1 and insert an A8 part on the side of this part.

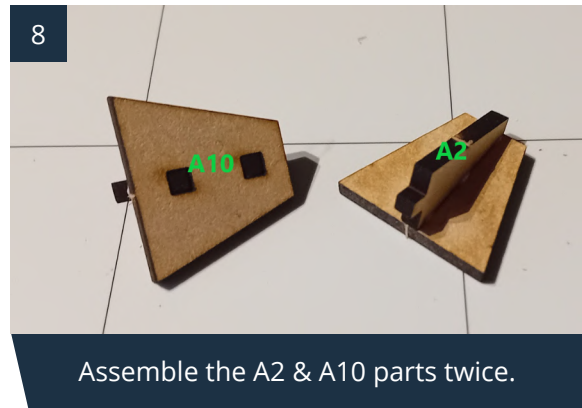

Assemble the A2 & A10 parts twice.

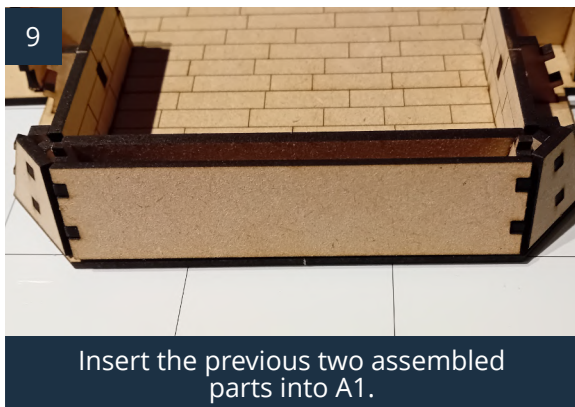

Insert the previous two assembled parts into A1.

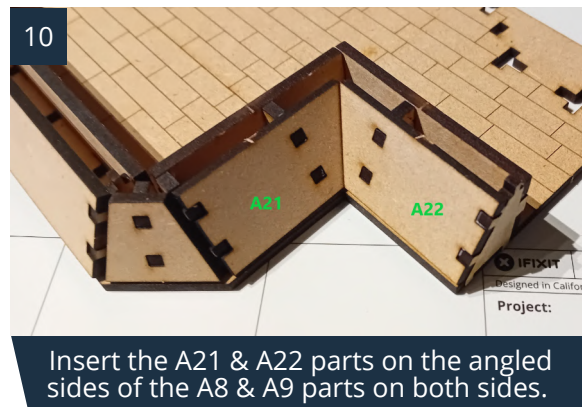


Insert the A21 & A22 parts on the angled sides of the A8 & A9 parts on both sides.



Put the A23 part on top.

From now on, there are two different ways to build the trench. Follow instructions 12 for a Artillery Position with an open backside. Or follow instructions 13 for a Artillery Position with a Closed back.

Build Option

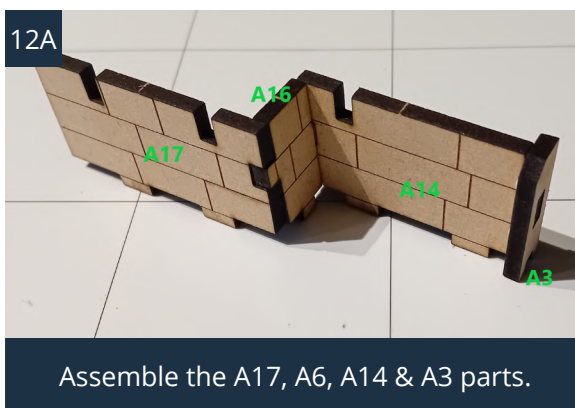

Assemble the A17, A6, A14 & A3 parts.



Insert the previously assembled parts into A1.

