

Assembly instructions for the Forward End

Thank you for purchasing our high quality MDF product!
We advise you to read our [Safety Instructions](#) on our website or by scanning the QR code. And before starting the assembling the product, we also advice you to read through the entire assembly guide before hand.




Safety Instructions

In addition to the MDF sprue you need:


- A hobby knife
- A file
- Woodglue

After pushing out the MDF parts we advise you to remove the remains of the connection points with a file or hobby knife and smooth it out.

If not stated otherwise, glue the parts together when the instructions tell you to insert or assemble parts. Use the pictures shown with the instruction as a guide for the assembling

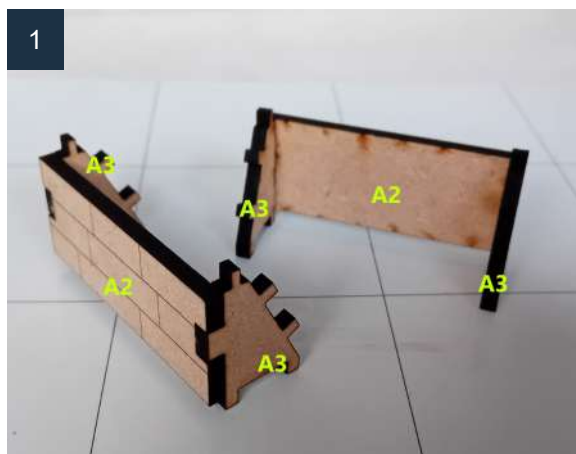


1. Assemble two A3 parts on the sides of A2 and make this part twice.

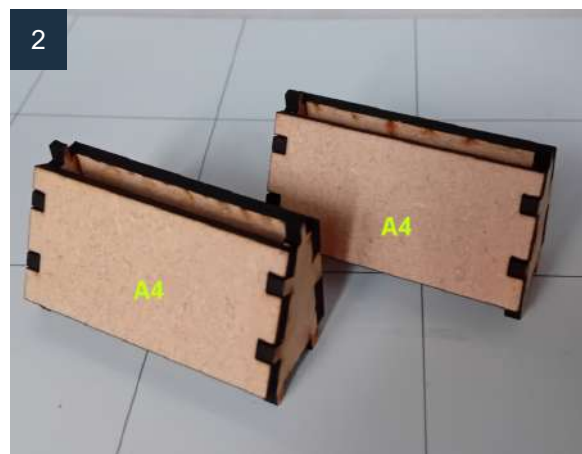

2. Add the A4 parts on the angled edges of the two previously assembled parts.




3. Insert the step 2 assembled parts into A1.

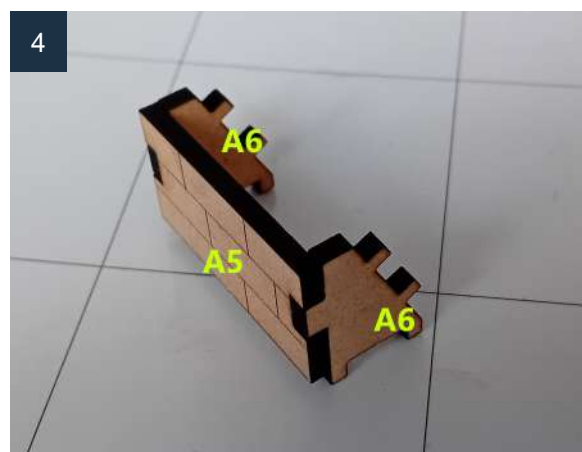

4. Assemble two A6 parts on the sides of the A5 part.




5. Add the A7 part on the angled edges of the previously assembled part.

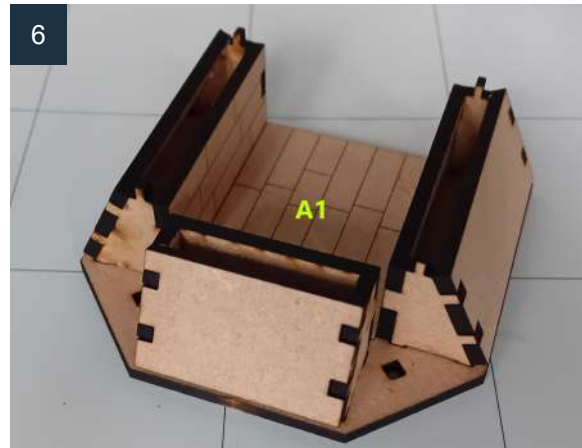

6. Insert the step 5 assembled part into A1.



7. Assemble the A8 and A9 part twice.

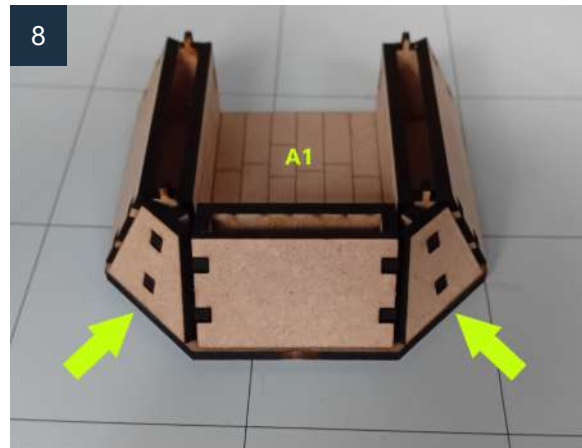

8. Insert the step 7 assembled parts into A1.



9. Add the A10 part as in the picture.