

Assembly instructions for the Front to Forward T-Split

Thank you for purchasing our high quality MDF product!
We advise you to read our [Safety Instructions](#) on our website or by scanning the QR code. And before starting the assembling the product, we also advice you to read through the entire assembly guide before hand.




Safety Instructions

In addition to the MDF sprue you need:

- A hobby knife
- A file
- Woodglue

After pushing out the MDF parts we advise you to remove the remains of the connection points with a file or hobby knife and smooth it out.

If not stated otherwise, glue the parts together when the instructions tell you to insert or assemble parts. Use the pictures shown with the instruction as a guide for the assembling

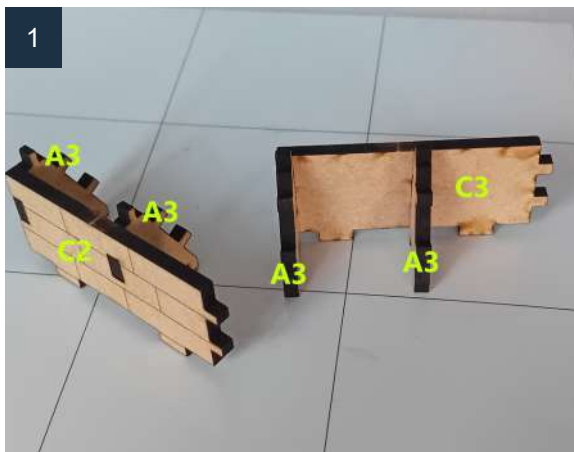


1. Assemble two A3 parts in the C2 part. And two A3 parts in the C3 part.




2. Assemble the C4 part to the C2 part. Assemble the C5 part to the C3 part.



3. Assemble one A3 part on the side of the C4 & C5 parts.

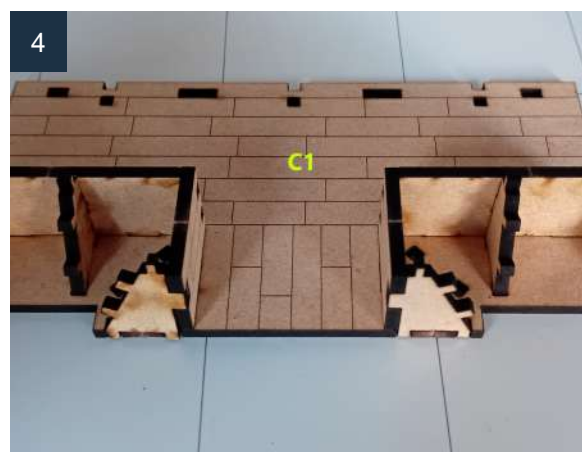


4. Insert the previously assembled two parts into C1.

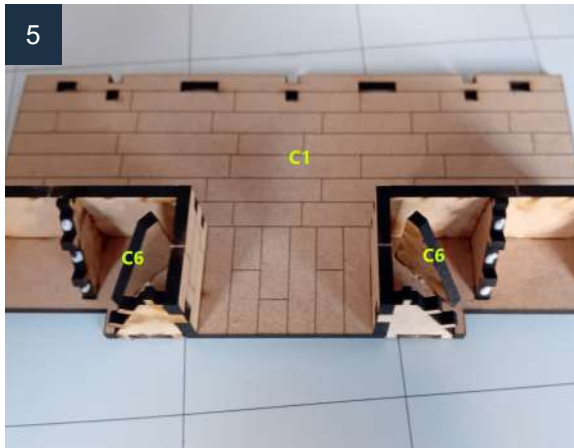


5. Insert two C6 parts into C1.




6. Assemble the C7 & C8 parts as shown in the picture.

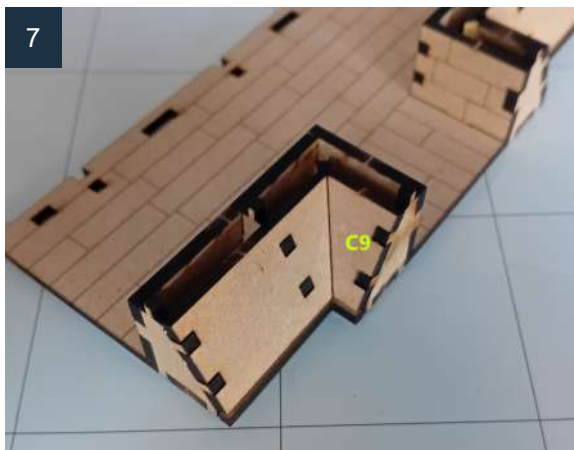

7. Assemble the C9 part as shown in the picture.

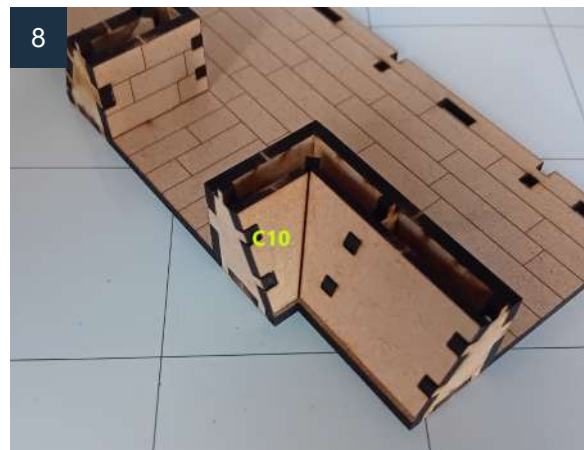


8. Assemble the C10 part as shown in the picture.

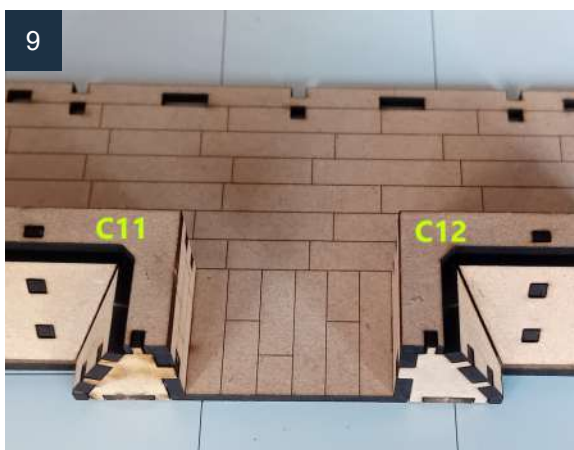

9. Assemble the C11 & C12 part as shown in the picture.



10. Insert the C13 part into C1.

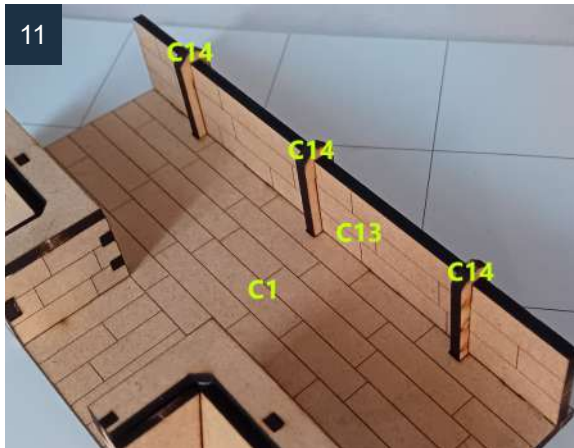

11. Insert three C14 parts into C13 & C1.